


CyberLock® Mounting a Keypoint to a Single Gang Electrical Box

1. Place the foam keypoint wall gasket onto the open face of the electrical box, lining up the screw holes. Then position the keypoint mounting plate on the gasket and screw in the two longer screws found with the keypoint hardware. Make sure the threaded inserts of the mounting plate are pointing outwards.

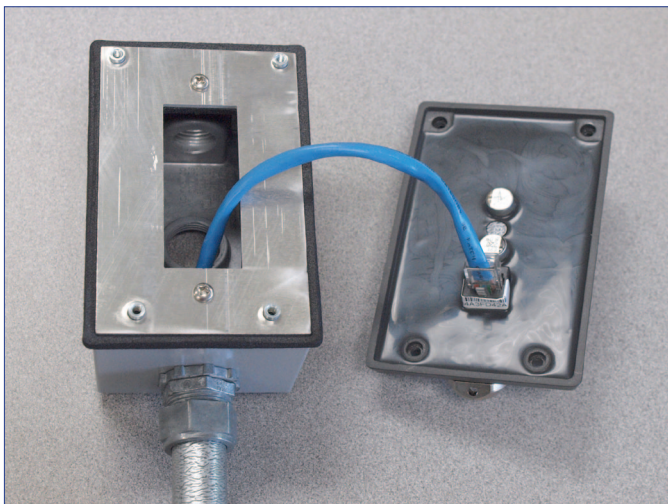

2. Route the Ethernet cable through one of the outlets and into the back of the keypoint.

Note: The mounting screws at the top of the box are farther apart than the bottom screws.

3. Using the security screws, fasten the keypoint onto the electrical box with the included screwdriver bit.

If installing outdoors, it is important to seal the outlets.



1105 N.E. Circle Blvd., Corvallis, OR 97330

541-758-0521 • Fax 541-752-5285 • www.videx.com • sales@videx.com • support@videx.com

Videx and CyberKey are registered trademarks of Videx, Inc. GCO2578